
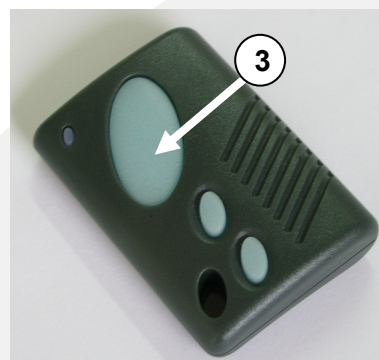


GRD 2000TM Code handset to Receiver

1. Carefully remove cover from control box by lifting tab at bottom
2. Press the receiver button once (located on receiver board top left corner of control box)
 - A red light will illuminate
3. Press large button on the handset once and hold until red-light on receiver board turns off
 - This confirms that the handset is programmed (Always use the large button for coding, even if configured to use small buttons for normal operation)

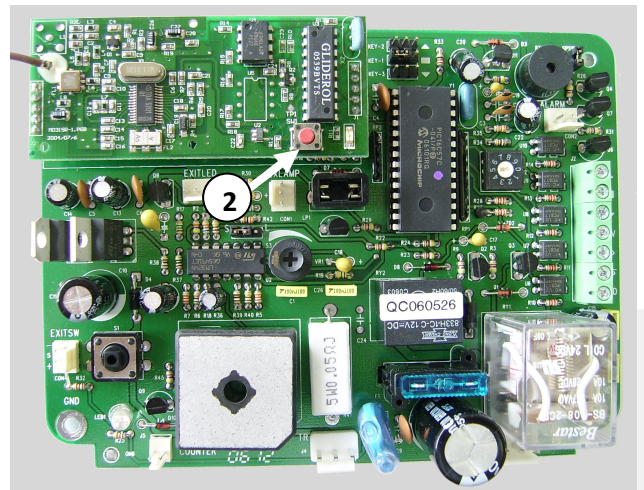

Each standard receiver can be configured to accept codes from ten separate handset units.

Note: To reset the receiver press and hold the learn button (2.) for 12 seconds. This will erase all handsets from the memory. This is recommended if a remote has been lost or stolen. Any other handsets previously used will need to be reprogrammed by following steps 1, 2 and 3 above.