

## TECHNICAL BULLETIN Code Handset to Receiver (NGTS V2 Board) NGTS V2 Tilt & Sectional Door Automatic Operator


Caution: Always disconnect power before making any setting changes

## NGTS V2 CODE HANDSET TO RECEIVER


1. Carefully remove the light cover by pulling down on tab near front of unit



- 2. Press the LEARN button once
- A red light will illuminate

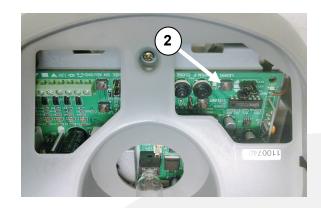

- 3. Press the large button on the handset once and hold until red-light on receiver board turns off
- This confirms that the handset is programmed (Always use the large button for coding, even if configured to use small buttons for normal operation)

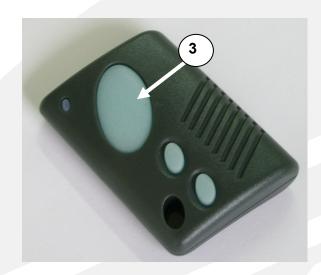

The NGTS Version 2 Board can be configured to accept codes from fifteen (15) separate handset units

Note: To reset the receiver press and hold the learn button (2.) for 12 seconds. This will erase all handsets from the memory. This is recommended if a remote has been lost or stolen. Any other handsets previously used will need to be reprogrammed by following steps 1, 2 and 3 above.